 
 


1. How to install on casement door

I . Install the lock body, see PIC 1, then fix up by screw M 4X40 (4 PCS), see PIC 2

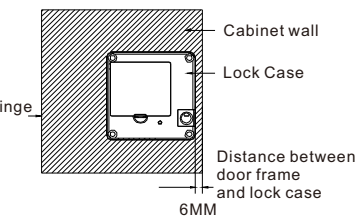


PIC 1

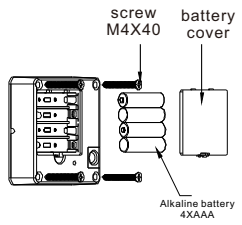


PIC 2

 II . Install striking plate at proper height, so that the latch can lock into the case see PIC 3, then fix up by screw M 4X20 (2 PCS), see PIC 4

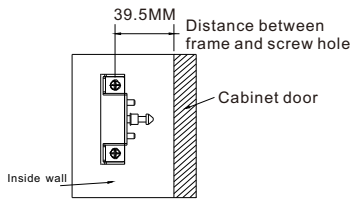


PIC 3

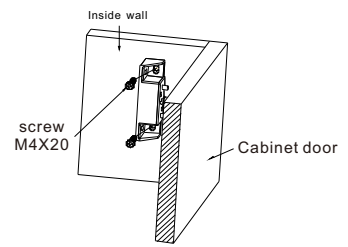 


PIC 4

 III . Installation complete

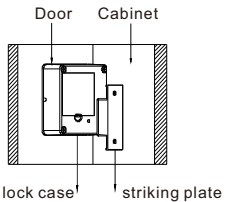


Casement Door Cabinet

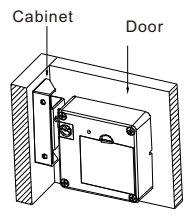 


Sliding Door Cabinet

2. How to install on sliding door

 I . Install the lock body, see PIC 5, then fix up by screw M 4X40 (4 PCS), see PIC 6

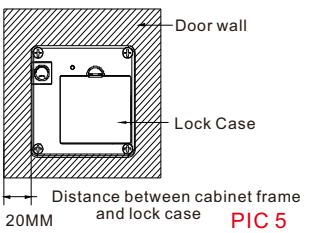


PIC 5

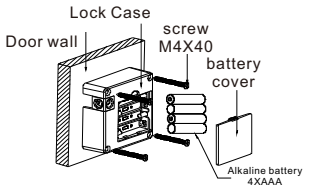 


PIC 6

 II . Install striking plate at proper height, so that the latch can lock into the case see PIC 7, then fix up by screw M 4X20 (2 PCS), see PIC 8

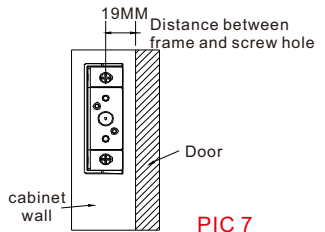

PIC 7

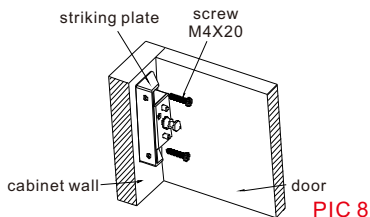 

PIC 8

Step1: Mode Selection

- Use a long pin or needle to press the reset for 1 sec
- A (1) long beep, then five (5) single beeps, single mode
- Use a long pin or needle to press the reset for 2 sec
- A (1) beep, then five (5) double beeps, dual mode

Step2: Master card

→ The first card is the master card

Step3: User card

- Use the master card touch induction zone, a beep
 - Use a new card touch induction zone, user card enabled
- Note: it can set 13 user card at a time if interruption no more than 5 sec.

Low Battery

Eight (8) beeps after door open, then eight (8) beeps and lock keeps open. It indicates low battery and need to change the battery immediately.